solavanti lighting

NOTE:
Must be installed in NEC compliant fashion.


Installation must be done by a qualified electrician familiar with local codes.

Switch mains power to off prior to installation.

LEDline 201
Installation Instructions

IP20 | 24V DC | AL Housing | ADA Compliant


1

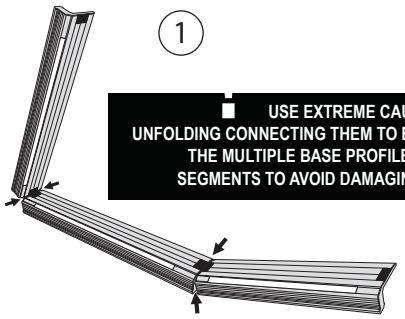

USE EXTREME CAUTION WHILE UNFOLDING CONNECTING THEM TO EACH OTHER THE MULTIPLE BASE PROFILE EXTENTION SEGMENTS TO AVOID DAMAGING THE WIRE


2

REMOVE PHILLIPS HEAD SCREW FROM END CAP AND SLIDE END CAP OUT OF PROFILE.

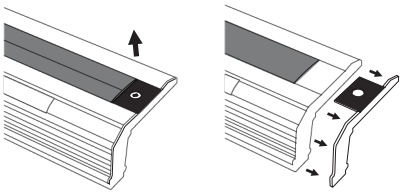


3

REMOVE ANTI-SLIP RUBBER STRIP BY SLIDING OUT OF PROFILE, AS WITH THE END CAP.

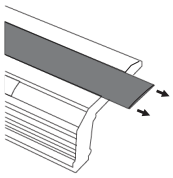

4

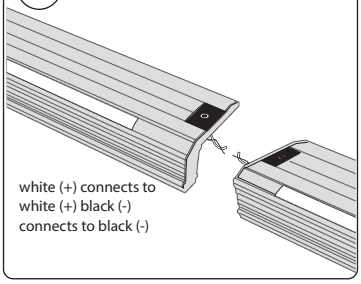

white (+) connects to white (+) black (-) connects to black (-)

5

LOCATE PRE-DRILLED MOUNTING HOLES. ONCE FIXTURE IS PLACED INTO FINAL DESIRED POSITION, MARK THE SURFACE OF WHICH THE FIXTURE IS TO BE MOUNTED THROUGH THE HOLES.


THE NEXT STEP DEPENDS ON THE TYPE OF SURFACE THE INSTALLATION WILL BE ON.

6

FIXATION ONTO A CONCRETE SURFACE:


REMOVE PROFILE, DRILL ANCHOR HOLES, PLACE PROVIDED PLASTIC ANCHORS INTO DRILLED HOLES.

THEN REPLACE PROFILE BACK INTO POSITION, DRILL PROVIDED SCREWS THROUGH PROFILE HOLES, AND INTO ANCHORS

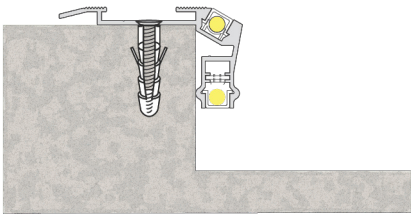


FIXATION ONTO A WOODEN SURFACE:

IF WOOD IS A SOFT MATERIAL (MDO, MDF, PINE, ETC.) THEN PRE-DRILLING AND USE OF ACHORS MAY NOT BE NECESSARY. IF SO, DRILL PROVIDED SCREWS THROUGH PROFILE HOLES, AND DIRECTLY INTO SURFACE.

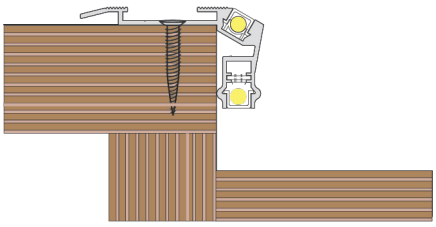

IN ALL CASES, IF CONSIDERED NECESSARY, IT IS RECOMMENDED TO SEAL THE PROFILE WITH NEUTRAL SILICONE, IN ORDER TO GUARANTEE BETTER FIXATION



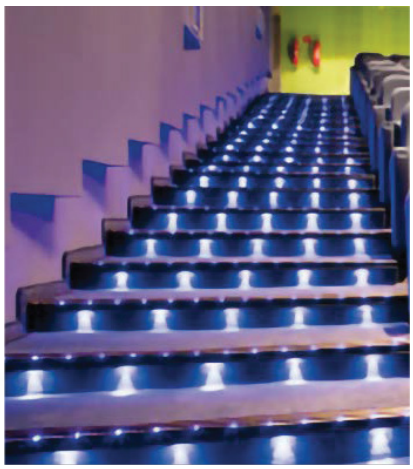

Solavanti Lighting | 3709 Cavalier Dr. Garland, TX 75042
Phone: +1 866-356-4458

More information:
Web: www.solavantilighting.com
Email: sales@solavantilighting.com